

Installation Instructions

PSHS-XXXX-10 – PIM Shield Hybrid Snap-In,
Qty 10

STEP 1

Insert Hybrid Snap-In onto cable.

STEP 2

Press Hybrid Snap-In into hole.

STEP 3

Assure the correct hooking of the tabs.


STEP 4

Add further Hybrid Snap-In clamps (3 max).


NOTE:

Support bracket must be low PIM for the system to be low PIM.


STEP 1

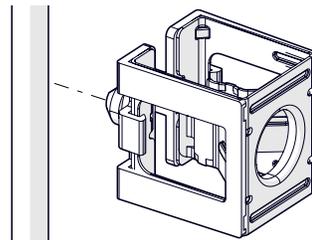


STEP 2

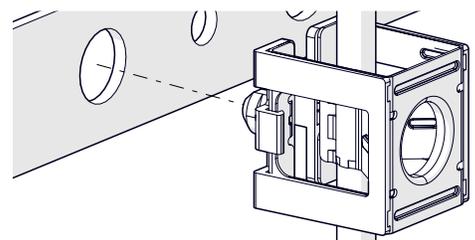

STEP 3

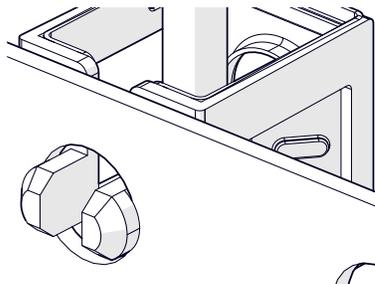

STEP 4

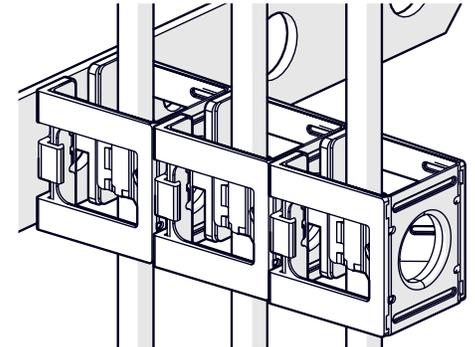

Installation Instructions

PSHS-XXXX-10 – PIM Shield Hybrid Snap-In,
Qty 10

STEP 1

Insert Hybrid Snap-In onto cable.

STEP 2

Press Hybrid Snap-In into hole.

STEP 3

Assure the correct hooking of the tabs.


STEP 4

Add further Hybrid Snap-In clamps (3 max).


NOTE:

Support bracket must be low PIM for the system to be low PIM.


STEP 1

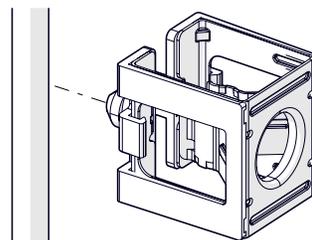

STEP 2

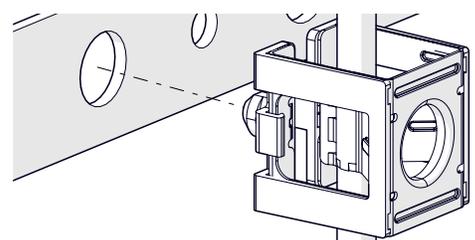

STEP 3

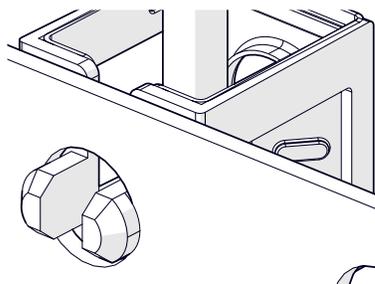

STEP 4

